



TDL 275 Dolly with 12ft Straight Track

(TDL-275)

INSTRUCTION MANUAL



All rights reserved.


No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

INTRODUCTION

Proaim Camera Dolly is a 3 wheel dolly which allows the camera and camera operator to move around very smoothly. This is 3-legged Track Dolly, very strong and durable that carry the weight of Jib, Pan Tilt Head and camera very easily. The total weight capacity of this portable camera dolly is up to 330lbs. You can use it independently with your own Dolly Tripod Stand. The Dolly System is excellent for making Professional and Independent videos.

IN THE BOX

Please inspect the contents of your shipped package to ensure you have received all that is pictured and listed below. The shipping bag have been especially designed to protect your purchase while in transit and is a good place to keep your Proaim TDL Dolly-275.

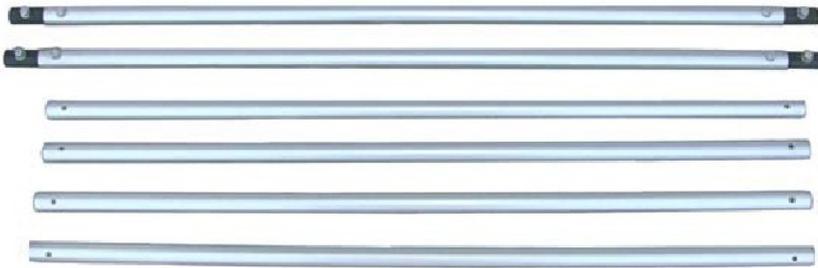

12ft Straight Track



10 x Blue wedges



10 x Black wedges



Proaim TDL Dolly-275



3 x Foot Clamps




2 x End Adapters

Storage Bag




ASSEMBLING THE SECTIONS OF 12FT TRACK


- Using the sections with the attached nylon bushings remove the outboard set of screws, slide an extension section on to each end to complete a 12' run and install.

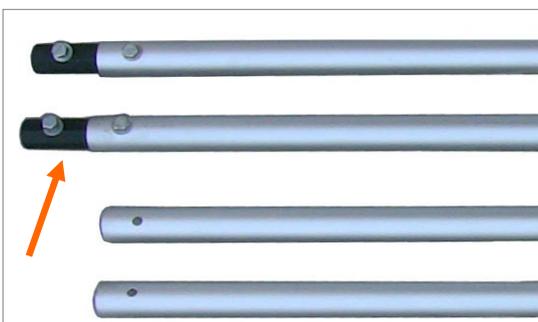


- Now tighten the screw to attach it properly as shown.

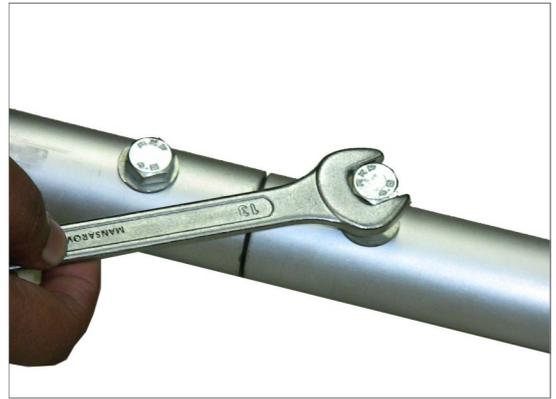

- Attach the end adapter at both the ends of the track.

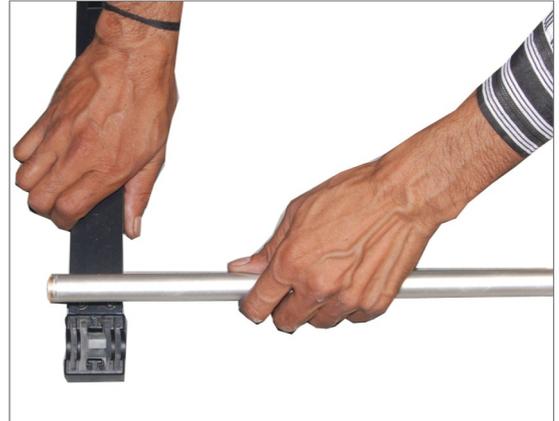

- After assembling the track, put the blue/black wedges below the track for better balancing.

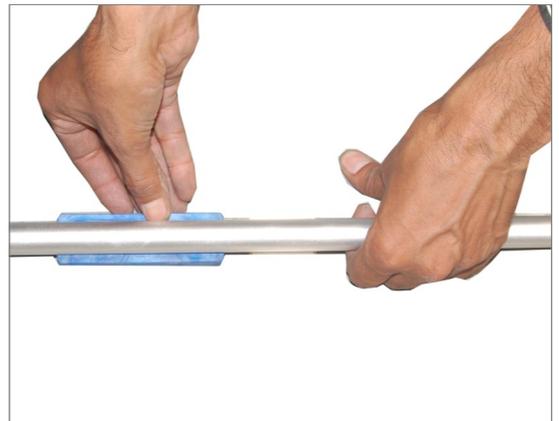

- Now, track is ready as shown in the picture below.



- You will receive your 3-leg dolly collapsed for shipping / storage purposes. Extend the legs and pull out each leg until it locks into place.
- Now place the dolly on the track. Make sure that dolly's wheels are properly set on track.



Mounting Tripod Stand on Dolly

- Place the tripod legs on Tripod Locking Adapter of Dolly. Lock the Tripod in place with the provided rubber grips on Dolly.



PROAIM TDL-275 Dolly with 12ft Straight Track
All set and ready to use



Mounting Jib Stand on Dolly

- Loosen the screw with the help of allen key and remove the Tripod Locking Adapter as shown below.



- Insert the screw as shown to attach the foot clamp with dolly and tighten with the help of allen key.



- Now, Place the dolly on track.



- Place the tripod legs on foot clamp of dolly and tighten with the help of knob to secure properly.



**YOUR PROAIM TDL-275 DOLLY WITH 12FT STRAIGHT TRACK
ALL SET AND READY TO GO.**



(SHOWN WITH OPTIONAL ACCESSORES)

WARRANTY

We offer a one year warranty for our products from the date of purchase.

We will repair or replace your product, free of charge, in the event of a defect in materials or craftsmanship obtained during normal use or handling based on the user manual. Please note that we will not cover any shipping costs for returning the product to us. If any VAT or import duties are applied to the return, we will also charge these costs to the customer.

The warranty does not include, by the way of example, damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product , or service by anyone other than our company.

We are not liable for incidental or consequential damages resulting from the use of the unit or occurring due to any breach of this warranty.

Replacement parts of the product will be provided at nominal cost (covering the cost price of the replacement parts only) to the customers after the Warranty Period has expired. We will cover the complete cost of sending replacement parts within the warranty period. After that, nominal cost of the product & Actual shipping cost will be charged.

Do not send the unit to us without first getting a response and getting the approval to send back the item.

In case of any kind of dissatisfaction, we urge you to Contact us immediately and we shall do our best to help you out.

For any other assistance you can reach us via email.